

**OPERATION ON THE SMARTEAM
DATABASE FOR THE INTEGRATION WITH
SEE ELECTRICAL EXPERT**

In order for the **SEE – Smarteam Integration** process to work flawlessly, a certain degree of customization of both the **Smarteam** database, script and the *SEE* environment is necessary.

Smarteam Database

Class Creation for a SEE Document


You can create a new class in the "Document" super class and name it as follows, using the **Smarteam Data Model Designer**:

- Class Name = **See Electrical Expert Document**
- Display Name = **See Electrical Expert Document**

Note

Make sure the "Add as Top Level" option is checked.

You can also specify an icon for this new class.

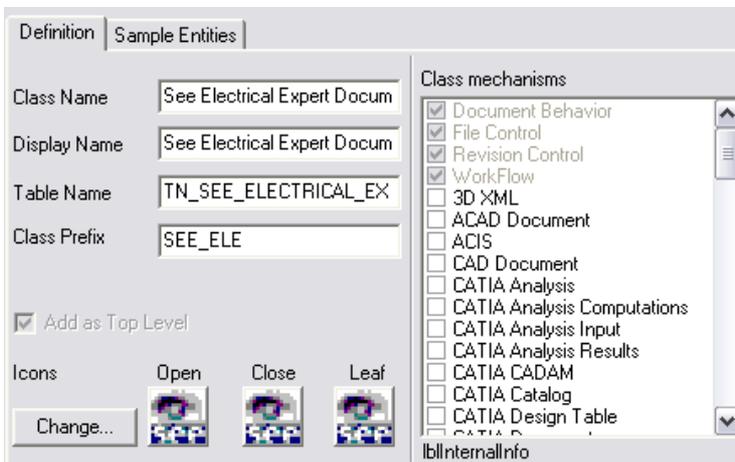

Class Creation for Appended Document


You can create a new class in the "Document" super class and name it as follows, using the **Smarteam Data Model Designer**:

- Class Name = **See Appended File**
- Display Name = **See Appended File**

Note


Make sure the "Add as Top Level" option is checked.

You can also specify an icon for this new class.

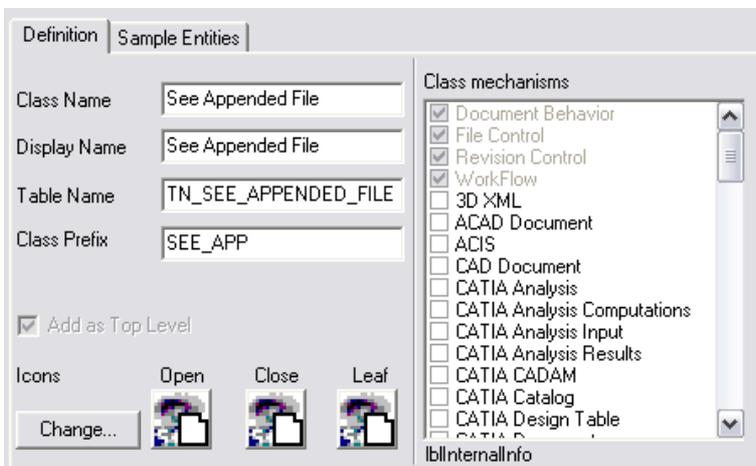

Composition Rule Setup

- Select the “Document Tree” link using the **Smarteam Data Model Designer**
- Click on the **Composition** tab.
- Select the **See Electrical Expert Document** class from the Class tree view and make sure the **See Appended File** class is checked, in order to allow appended files to be created as children of **SEE** documents.

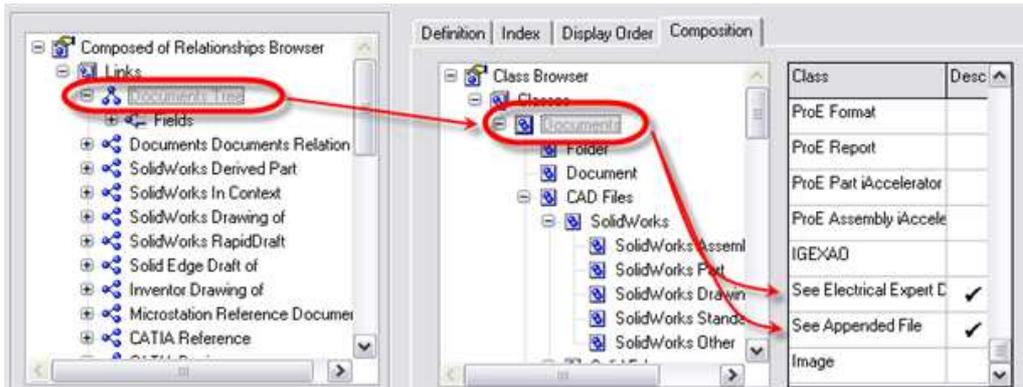


File Type Definition

You need to define a new file type for a **SEE** document, allowing **Smarteam** to associate **SEE** with this file type.


- Within the **Smarteam Editor**, click on **Tool/Lookup Tables**.

The following dialogue box is displayed:

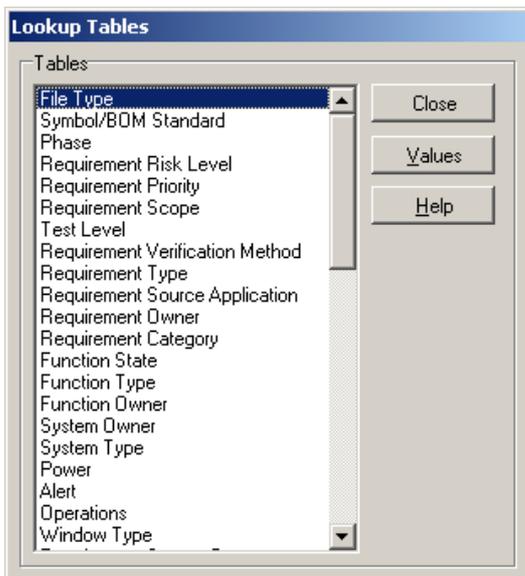

- Select **File Type** and click the **Values** button.

The following dialogue box is displayed.

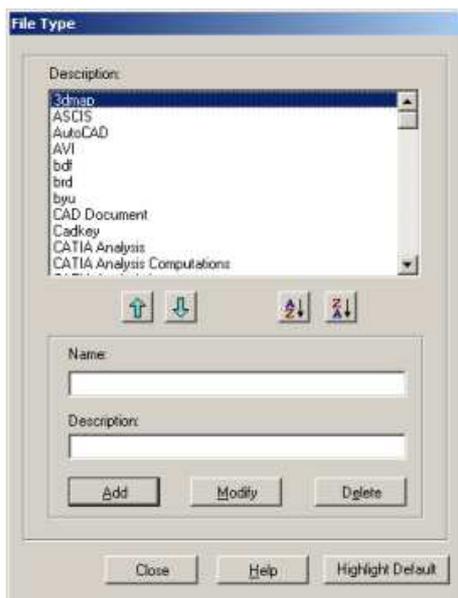

- In the **Name** field, type in "See Electrical Expert" and in the **Description** field, type in "See Electrical Expert".




- Click the **Add** button.


You can now close this window, as well as the previous one.

- Within the **Smarteam Editor**, click on **Tool/Application Setup**.

The following dialogue box is displayed:

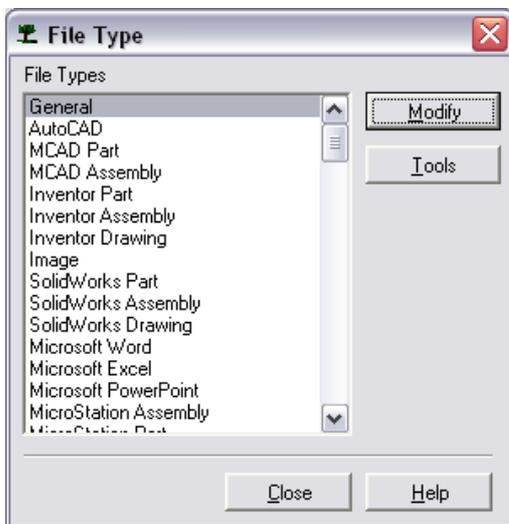


- Scroll down until you find the **See Electrical Expert** file type created in the previous step.

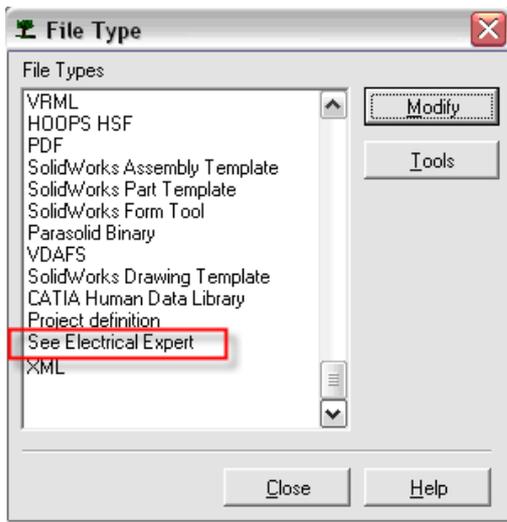


- Select the **See Electrical Expert** file type, then click .

The following window is displayed:

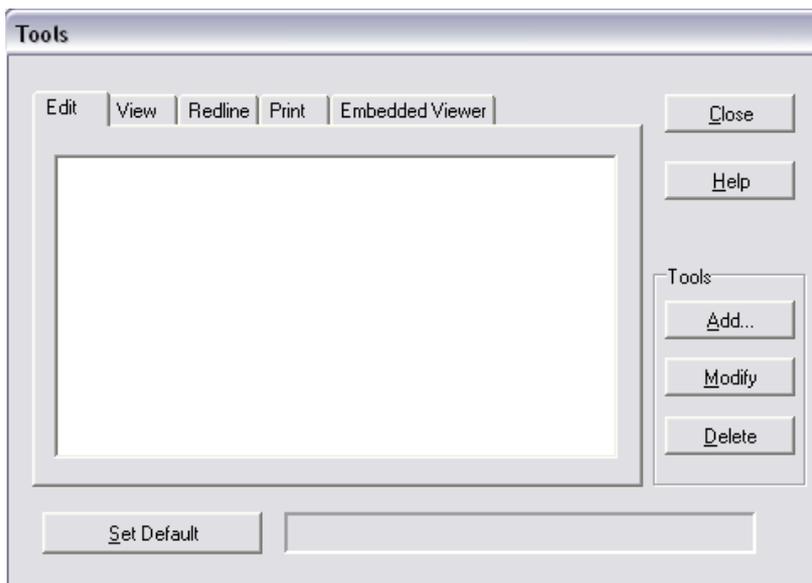

- From the **Tools** section, click the **Add** button.

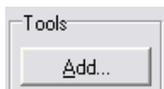


The following window is displayed:

The screenshot shows a dialog box titled "Add/Modify Tool" with a close button in the top right corner. The dialog is divided into two tabs: "General Setup" and "Advanced Setup". The "General Setup" tab is selected. It contains the following fields and controls:

- Application Tool:** A pull-down menu.
- Tool name:** A text input field.
- Original tool name:** A text input field.
- Command line:** A text input field with a "Browse" button (represented by a folder icon) to its right.
- Command line parameters:** A text input field with a "Browse" button to its right.
- Default directory:** A text input field with a "Browse" button to its right.
- Switch to directory:** A checkbox.
- DDE application:** A text input field.
- DDE topic:** A text input field.
- DDE command when running:** A text input field.
- DDE command when not running:** A text input field.

On the right side of the dialog, there are three buttons: "OK", "Cancel", and "Help".

- Select **See File** from the "**Application Tool**" pull-down list.

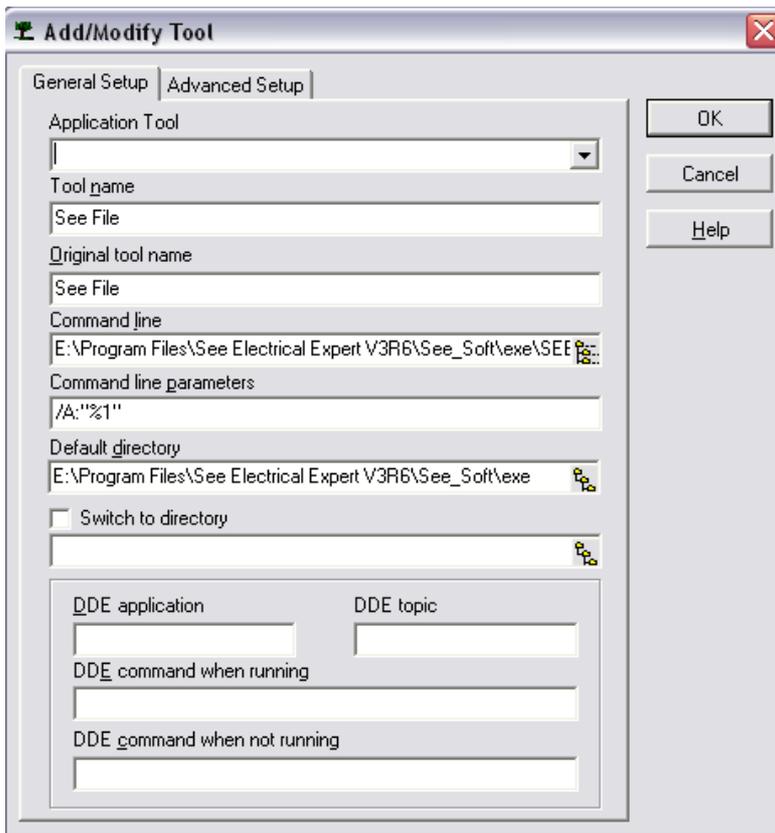


Note

As you make your selection, many other fields will be automatically filled in. Leave them with their default values.


- Click **OK**.
- Then click on the **Embedded Viewer** tab.



- From the **Tools** section, click the **Add** button.

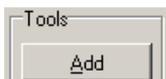

The following window is displayed:

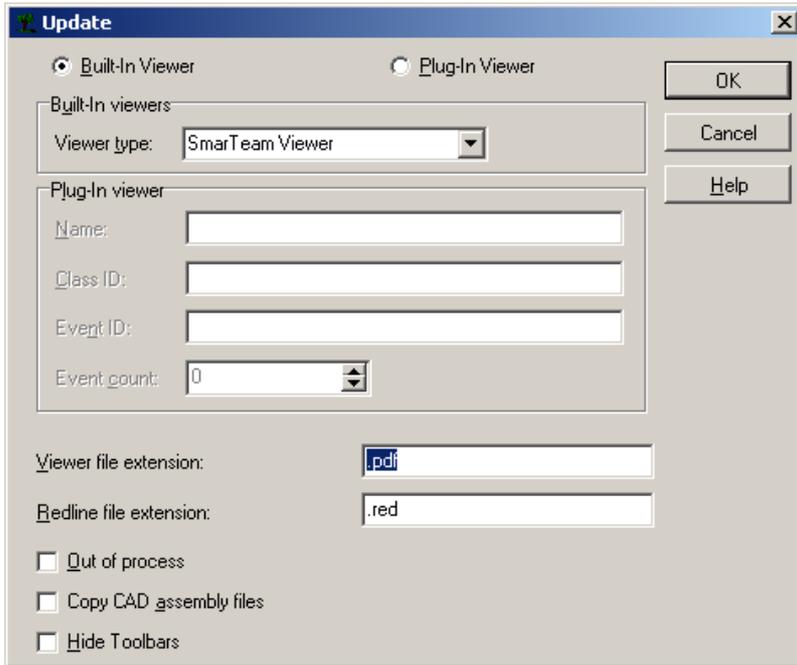

- Fill in the values as shown in this previous dialogue image and click **OK**.
- Click **Close** on the previous window.


Smarteam Script

Synchronization between a See document and a Smarteam document


It is necessary to connect a specific Smarteam script (delivered by IGE+XAO) on the life cycle operation 'Check Out' and 'New Release'; because at the execution of the referred operations, a new Document is created and consequently – a new OBJECT_ID in the Smarteam Database. This script updates the value of the synchronization attribute within SEE with the OBJECT_ID of the new Smarteam Document.

- In the directory **Tools\Smarteam integration\script** there is the script **sync_SMARTtoSEE.bs**, (this file is installed by the See Electrical Expert setup). Copy this file in the directory **script** of Smarteam installation directory.


- Launch the Smarteam tools “**SmartBasic Script Maintenance**”
- Click on the class **See Electrical Expert Document** and double click in the column “After” of the operation “**Check Out**”

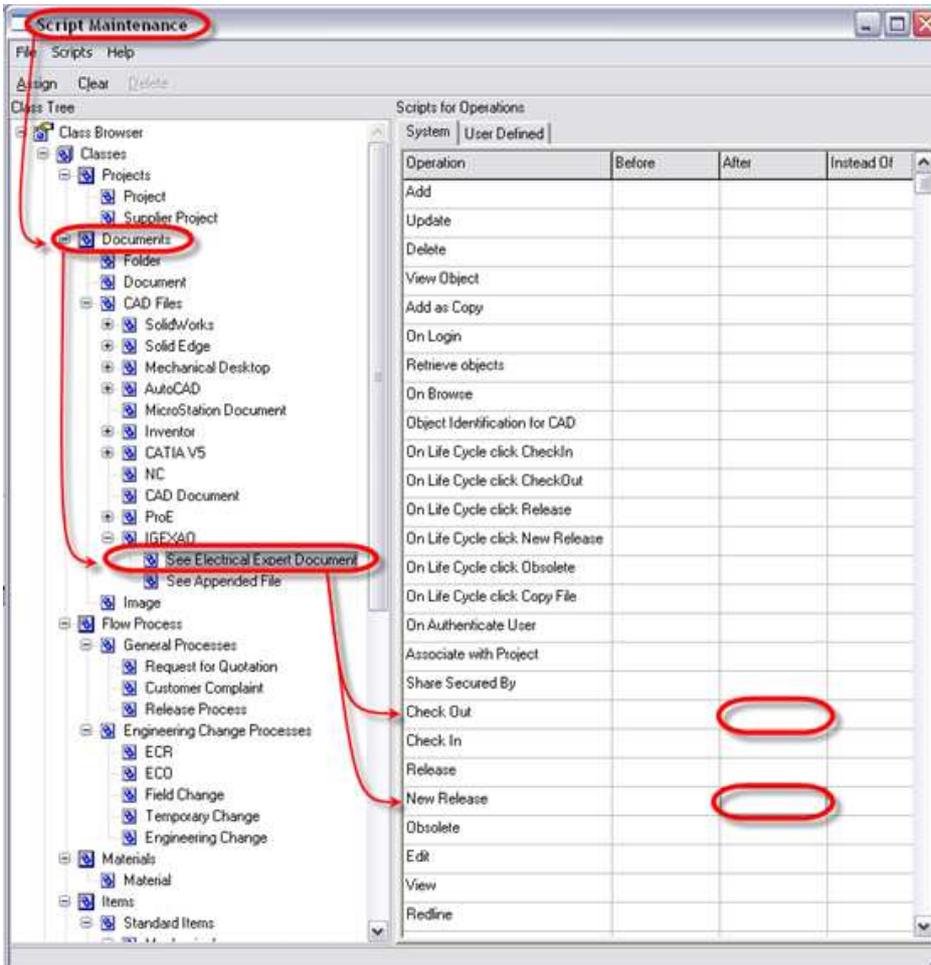

- At this window you select the script **sync_SMARTtoSEE.bs** (in the first part “*file name*”) with a double click, the script appear in the second part (*Functions*) and in the third part we have the code. Click the button OK to validate the window.

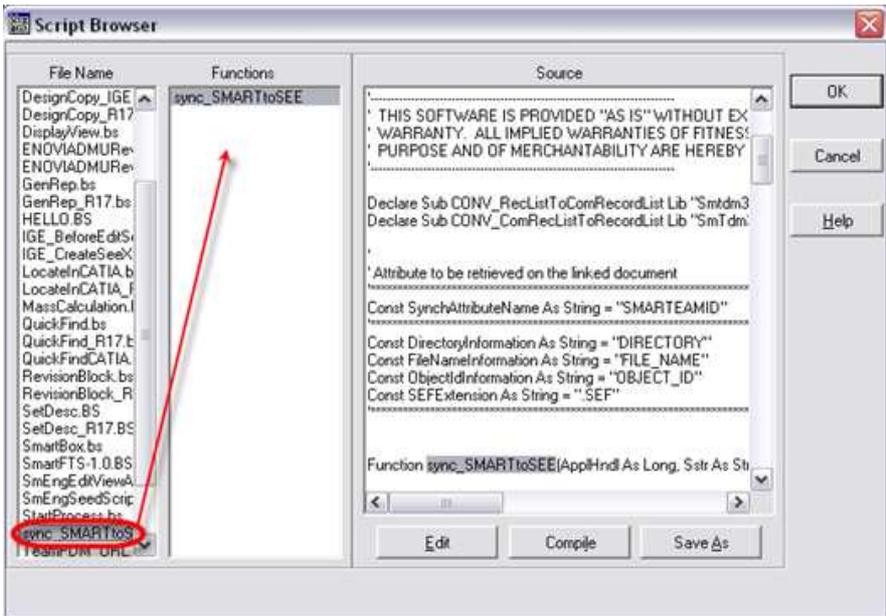

- Repeat the same operation on the life cycle **"New Release"**, for to have the following result :

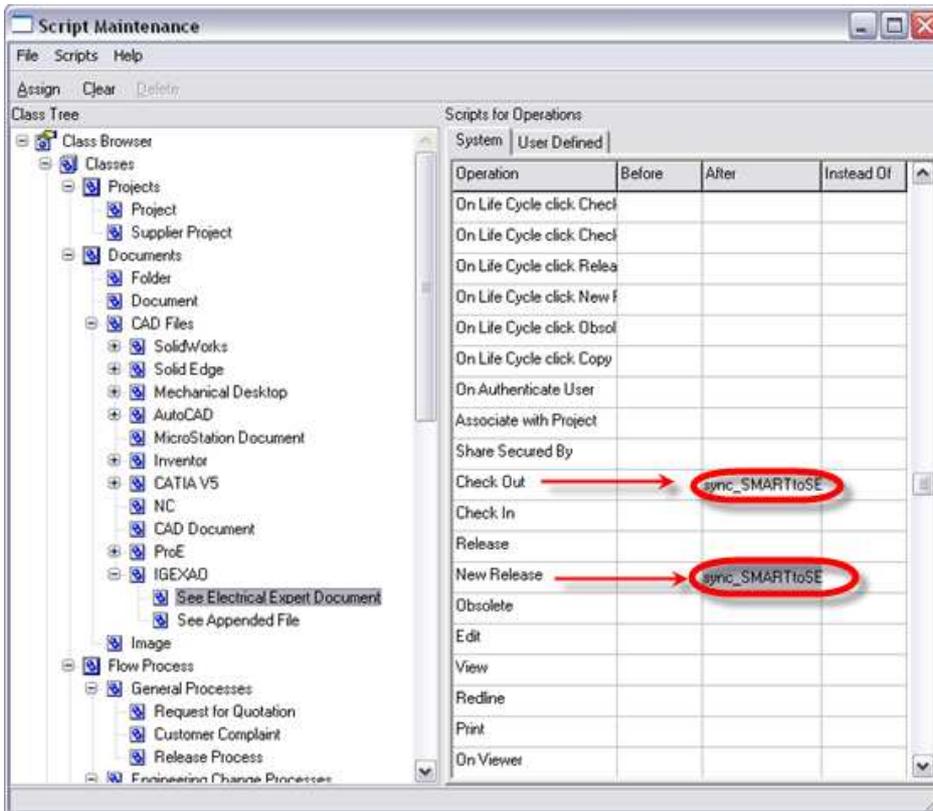


SEE Environment

It is necessary to specify, in *SEE*, various settings for proper synchronization with **Smarteam**.


- Click **Environment/Methods** within the **SEE Editor**.

The following window is displayed:

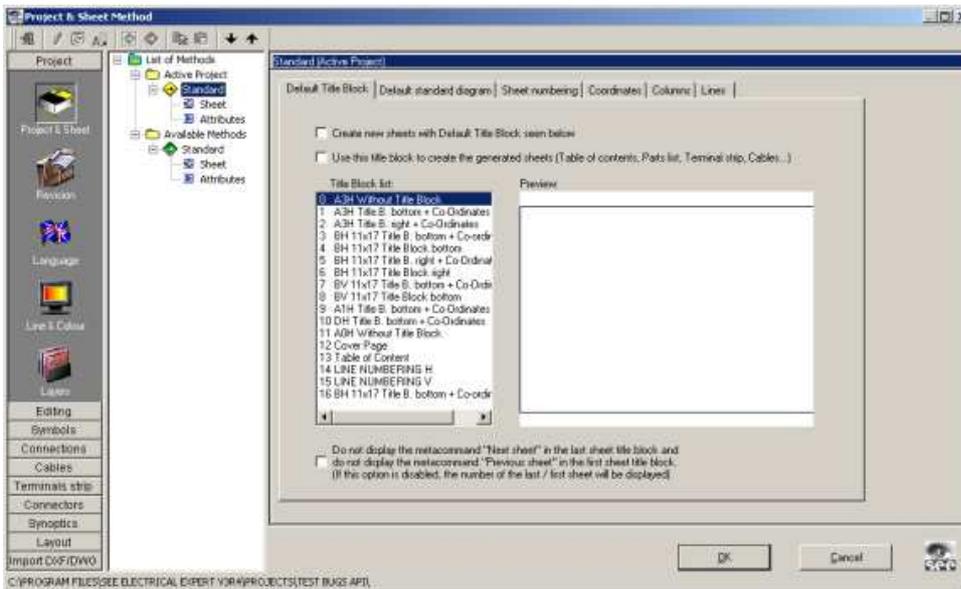

- Click **Product Integration** in the left section.

The following depictive icon is contained there:

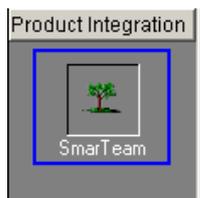

Data Model

This tab allows specifying the **SEE** settings to use for proper synchronisation with **SmarTeam**, ex:

Data Model | Attribute Mapping

SmarTeam Synchronization
Attribute Name for Synchronization: SMARTEAMID

SmarTeam Classes Used
Class Used for SEE Projects: See Electrical Expert Document
Class Used for Attached Files: See Appended File
Look Up Class Name: File Type

SmarTeam File Types
File Type Used for SEE Projects: See Electrical Expert
Class Used for Attached Files:

| File Extension | Class Used | File Type Used |
|----------------|-----------------|-----------------|
| XML | Document | General |
| DOC | Office Document | Microsoft Word |
| XLS | Office Document | Microsoft Excel |


SmarTeam Synchronization

Make sure the proper *Attribute name* is entered in the field:

SmarTeam Synchronization
Attribute Name for Synchronization: SMARTEAMID

The synchronization attribute, specified in the field, is automatically updated in the **SEE** Project when you open it following the execution of a **Smarteam/Life Cycle/Check Out...** or **Smarteam/Life Cycle/New Release...** operation within the **Smarteam** Application.

This attribute has to be created in the "project attributes"

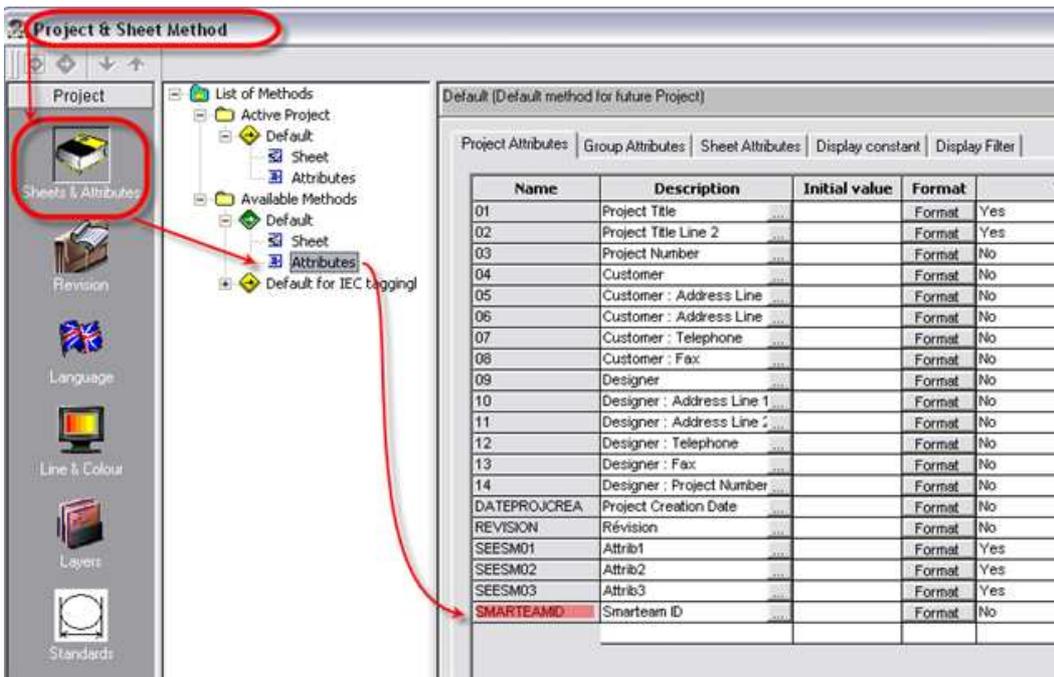

Note See also : [Synchronization between a See document and Smarteam document](#)

The update occurs because at the execution of the referred operations, a new Document is created and consequently – a new OBJECT_ID in the **Smarteam** Database. A special script, previously connected by you to the “Check Out” and “New Release” operations, updates the value of the synchronization attribute within **SEE** with the OBJECT_ID of the new **Smarteam** Document.

(For further information on connecting scripts with life cycles, using **Smarteam** tools, refer to the **Smarteam** Documentation.)


Smarteam Class Used

Make sure the proper values are entered:

| SmarTeam Classes Used | |
|--------------------------------|--------------------------------|
| Class Used for SEE Projects: | See Electrical Expert Document |
| Class Used for Attached Files: | See Appended File |
| Look Up Class Name | File Type |

File Type Management

Make sure the proper **File Type** is defined for the *SEE* Document:

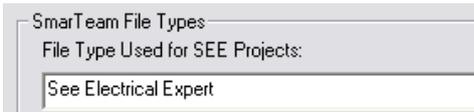


SmarTeam File Types
File Type Used for SEE Projects:
See Electrical Expert

For each file extension you wish to be identified as an appended file, make sure the proper association is made between the file extension, the class used for this extension and the **SmarTeam** file type used.


| Class Used for Attached Files: | | |
|--------------------------------|-----------------|-----------------|
| File Extension | Class Used | File Type Used |
| XML | Document | General |
| DOC | Office Document | Microsoft Word |
| XLS | Office Document | Microsoft Excel |

Advanced Settings

Normally, the default values for these settings are correct for most **SmarTeam** installations. It is possible to change them simply if you wish to allow some flexibility in case **SmarTeam** has to change the system values used by the **SEE – SmarTeam Integration**.

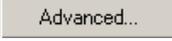- Click the  button.

The following window is displayed:

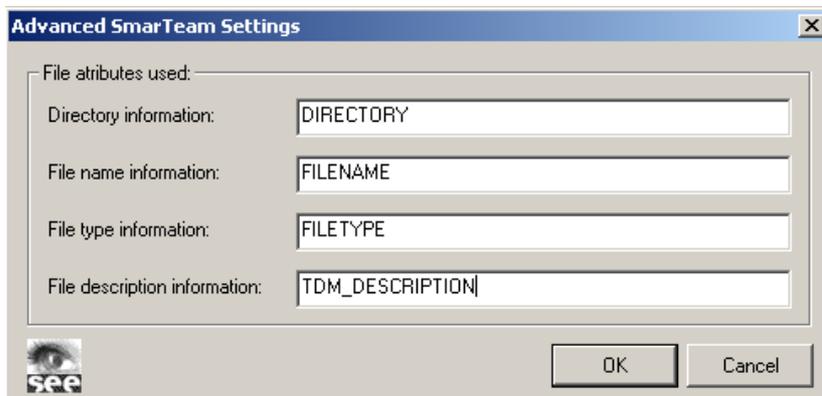

Advanced SmarTeam Settings

File attributes used:

Directory information: DIRECTORY

File name information: FILENAME

File type information: FILETYPE

File description information: TDM_DESCRIPTION

SEE logo

OK Cancel

These settings define which **SmarTeam** attributes are used for the directory information, the file name information and the file description information.

Note


Commentaire [MN1] : \definit
ion #1

The **File description Information** attribute will be the attribute used for create the name of new see document with the command "Save As" of Smarteam menu in See Electrical Expert.

- You can then change any of these values, if needed.

Attribute Mapping

Within this tab you define the correspondence between *SEE* Project attributes and SmarTeam Document Object attributes.

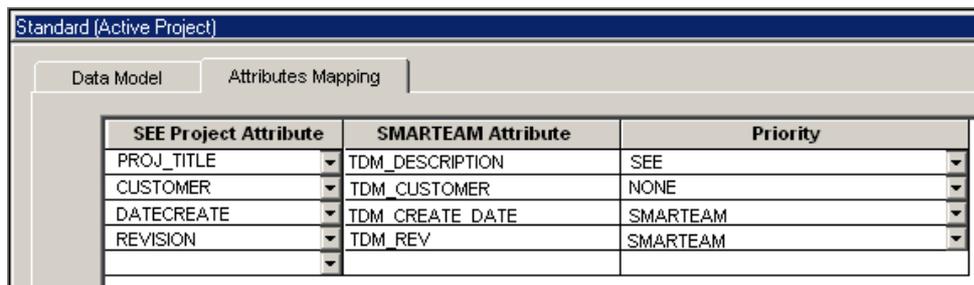

| SEE Project Attribute | SMARTEAM Attribute | Priority |
|-----------------------|--------------------|----------|
| PROJ_TITLE | TDM_DESCRIPTION | SEE |
| CUSTOMER | TDM_CUSTOMER | NONE |
| DATECREATE | TDM_CREATE_DATE | SMARTEAM |
| REVISION | TDM_REV | SMARTEAM |

"SEE Project Attribute" Field

Click on the  within this field to select, from the scrolling list that opens, the desired project attribute to map - you cannot type in this field.

The list contains all SEE Project Attributes listed by their names, read from the **Sheet & Attributes** method.

"SMARTEAM Attribute" Field

Enter manually the name of the desired Smarteam Attribute to be mapped with the selected SEE Project Attribute.

"Priority" Field

Specify, for your pair of attributes, whether and which one of the two applications – SEE or SMARTEAM – will have priority.

After clicking on the  button within the field, choose between the three possibilities provided: **NONE**, **SEE** and **SMARTEAM INTEGRATION**.

The **NONE** option is filled in by default whenever you add a new SEE Project Attribute to map.

After you define a mapping pair, a new empty line automatically appears allowing you to define the next one, if desired.

When you open a **SEE** Project from **SMARTEAM**, the values of the **SMARTEAM** attributes being parts of mapping pairs for which the *Priority* was set to "**SMARTEAM INTEGRATION**" or "**NONE**" are transferred to the respective **SEE** Project Attributes.

Note

*You can delete a defined mapping pair by clicking within the **SEE Project Attribute** field to select the whole line and pressing the **"Delete"** key of the keyboard afterwards.*

Synchronization between Paired Attributes when Opening SEE Project within Smarteam

When, within *Smarteam*, you open a **SEE** Project, synchronization process is performed for the paired attributes provided:

- The **SEE** Project is associated to **Smarteam**
Thus, when opening the respective **SEE** Project, the Smarteam Document Object associated to this project is identified.
- Pairs of the desired attributes from the two applications were defined in the **Attributes Mapping** tab of the **Smarteam** Method within **SEE**.
 - If, however, one of the attributes, of which a mapping pair is composed, is missing, synchronization is not performed for this pair.
- The *Priority* being set for the particular mapping pairs is "**SMARTEAM INTEGRATION**" or "**NONE**".
- The **SEE** Project is being opened in mode different from *"for copy"*.

If all of the above conditions are satisfied, then when you open a **SEE** Document from **SMARTEAM**, the values of the **SMARTEAM** attributes being parts of correctly defined mapping pairs are transferred to their respective **SEE** Project Attributes associated.

Synchronization between Paired Attributes at Saving SEE Project within Smarteam

When, within *Smarteam*, you save a **SEE** Project by either:

- executing the Smarteam/Save or Smarteam/Save As... commands
- or
- closing the Project
- or
- performing any of the **Smarteam/Life Cycle...** commands such as: Check In, Check Out, Release, New Release, Obsolete, Undo Check Out

Synchronization process is performed for the paired attributes provided:

- The respective **SEE** Project is associated to **Smarteam**
Thus, when opening the respective **SEE** Project, the Smarteam Document Object associated to this project is identified.
- Pairs of the desired attributes from the two applications were defined in the **Attributes Mapping** tab of the **SmarTeam** Method within **SEE**.
 - If one of the attributes to compose a mapping pair is missing, synchronization is not performed for this pair.
- The **Priority** being set for the particular mapping pairs is "**SEE**" or "**NONE**".

If these conditions are satisfied, when saving a **SEE** Project within **SMARTTEAM** through any of the actions quoted above, the values of the **SEE** Project Attributes being parts of correctly defined mapping pairs are transferred to their respective **SMARTTEAM** attributes – on the Smarteam Document Object.